


9. DISCHARGE VALVE ASSEMBLY (For HX2T-50/60NP/D)

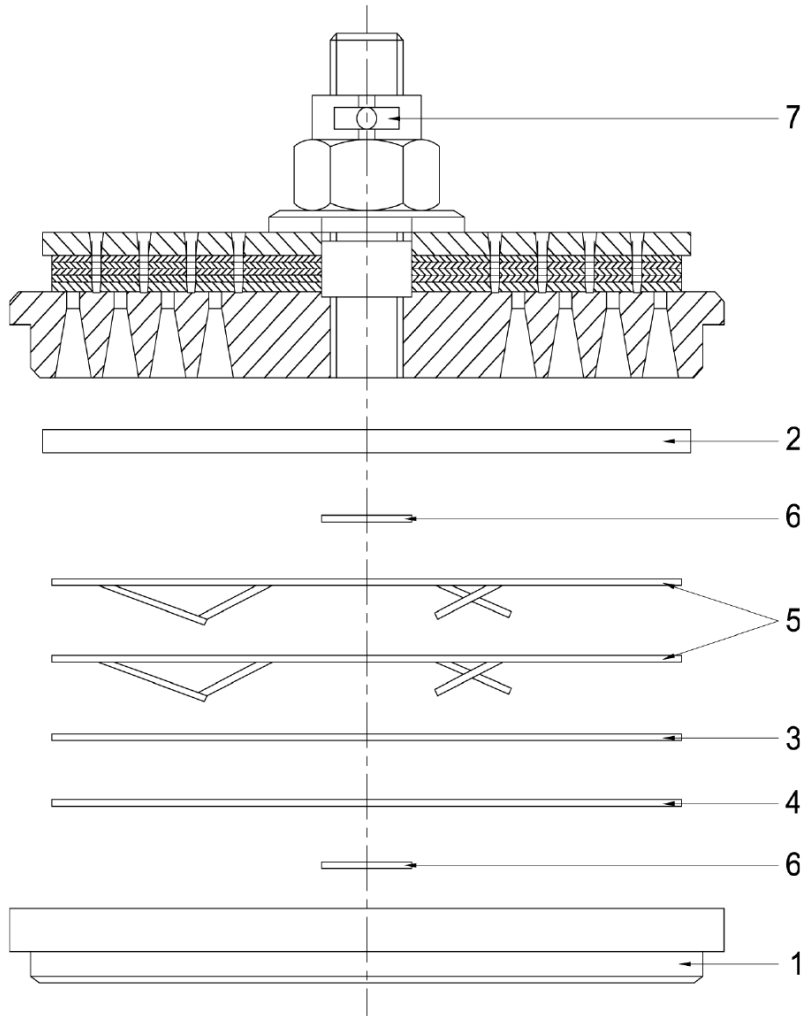

9. DISCHARGE VALVE ASSEMBLY (For HX2T-50/60NP/D)

No.	Description	Ref Part No.	QTY
Discharge Valve Assembly - First Stage - Qty.: 02 nos. per Compressor			
-	Discharge valve Assembly (First Stage)	1903254190	1
1	*Valve Seat Assembly	Z2545150	1
2	*Valve Keeper	1903617703	1
3	*Damper Plate	1903222605	1
-	Valve Service Kit	1903005295	1
4	*Valve Plate	1903222505	1
5	*Spring Plate	1903222805	2
6	*Lift Washer	1903044708	2
7	*Split Pin	1903510813	1
-	*O' Ring for Valve cover	1903021208	1
-	*Copper Gasket	1903362213	1
Discharge Valve Assembly - Second Stage - Qty.: 02 nos. per Compressor			
-	Discharge valve Assembly (Second Stage)	1903254390	1
1	*Valve Seat Assembly	Z2545150	1
2	*Valve Keeper	1903617703	1
3	*Damper Plate	1903222605	1
-	Valve Service Kit	1903005495	1
4	*Valve Plate	1903222505	1
5	*Spring Plate	1903222805	3
6	*Lift Washer	1903074708	2
7	*Split Pin	1903510813	1
-	*O' Ring for Valve cover	1903021213	1
-	*Copper Gasket	1903362213	1