


9. SUCTION VALVE COVER ASSEMBLY (1ST STAGE)

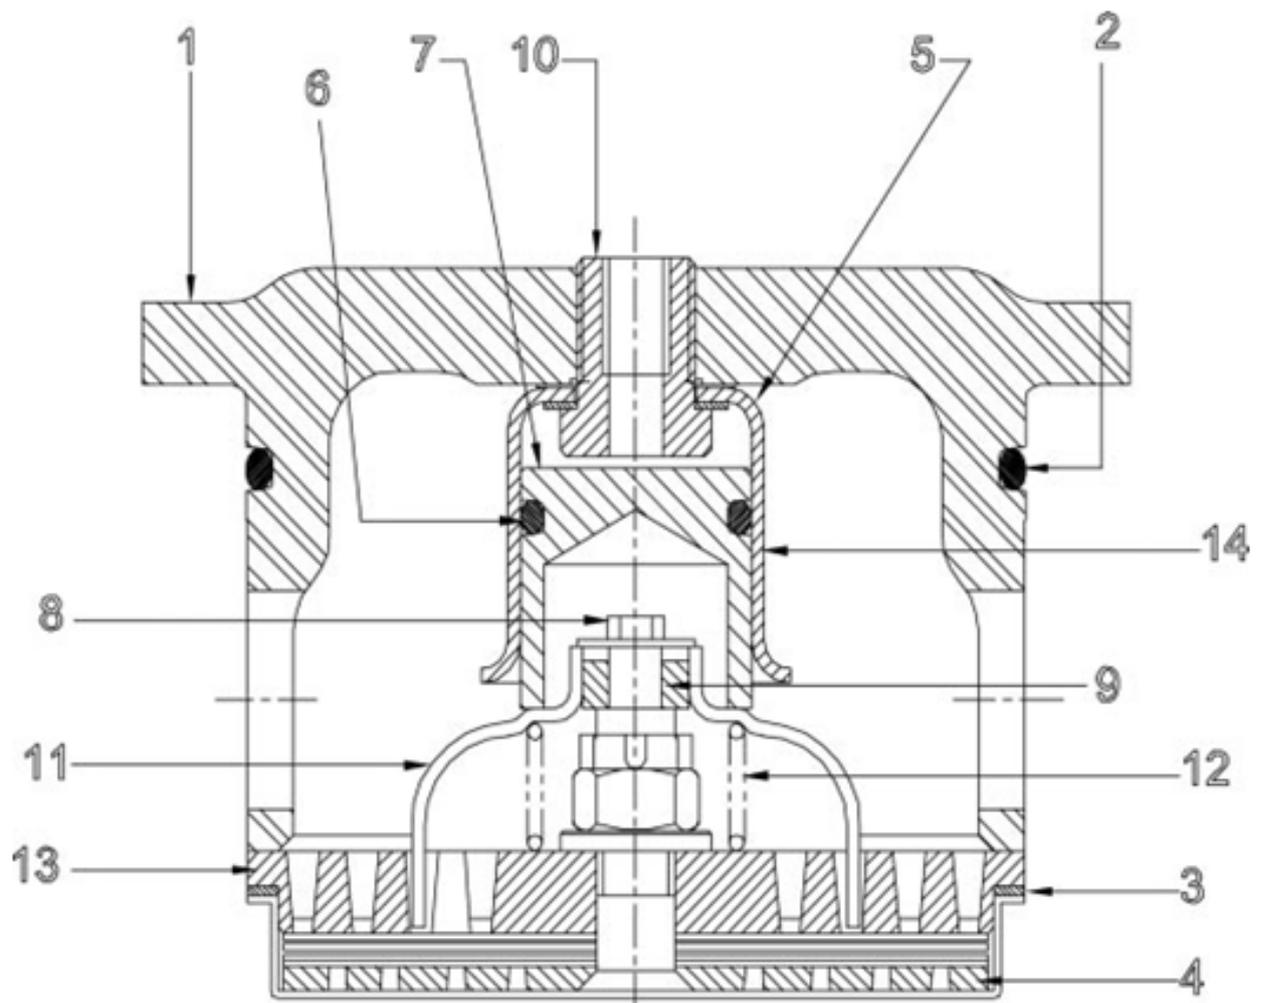

All manufacturer's names, numbers, photos, product description and/or part numbers are used for reference purposes only & it is not implied that any part listed is the product of these manufacturers. Since Approvement are made from time to time, the illustration and specifications are subject to change without notice.

9. SUCTION VALVE COVER ASSEMBLY (1ST STAGE)

No.	Description	Ref Part No.	QTY
-	Suction valve Cover Assembly (First Stage)	1901800811	1
1	Suction Valve Lantern Cover	1903718803	1
2	O ring (R49, ID 104, 14xD 5.13)	0663211205	1
3	Copper gasket (D118 x D111.2x2)	0653050049	1
4	Suction Valve Protection Grill	1901003847	1
5	Piston for Unloading	1901003397	1
6	O Ring (R22, ID29.3xD3.6)	0663211230	1
7	Steel Washer	0300027464	1
8	Screw, M5x10	0147020403	1
9	Lifter Guide	1901003846	1
10	Lock Screw for cylinder, M18x1.5	1901002815	1
11	Lifter	1901004017	1
12	Lifter Spring	1901003328	1
13	Suction Valve	1901003123	1

Note :

Suction Valve Cover Assembly First Stage - Qty. : 04nos. per Compressor