


## 4. FIRST STAGE AIR CYLINDER ASSEMBLY (For HX2T-50NP/D & HX2T-60NP/D)

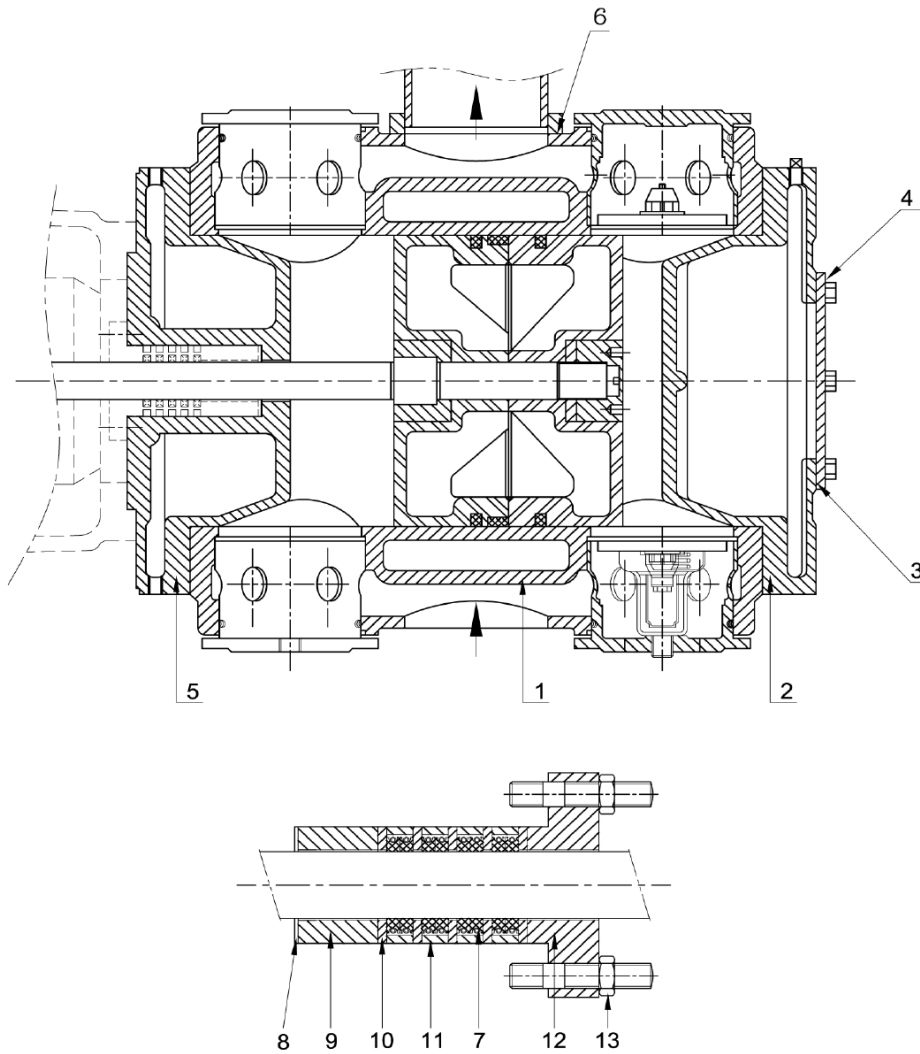

## 4. FIRST STAGE AIR CYLINDER ASSEMBLY (For HX2T-50NP/D & HX2T-60NP/D)

No.	Description	Ref Part No.	QTY
1	<b>Cylinder Assembly (Dia.250)</b>	<b>1903909095</b>	1
-	Door (Pressed)	1901003348	2
-	Gasket for Door	1901003812	2
-	Cu. washer	1903361913	20
2	<b>Cylinder Head Assembly (Outer)</b>	<b>1903903695</b>	1
-	Gasket	1901003835	1
3	*Gasket for Closing Plate	1901003831	1
4	*Closing Plate	1901006265	1
5	<b>Cylinder Head Assembly (Inner)</b>	<b>1903903595</b>	1
-	Gasket for water passage	1901003803	1
6	Gasket for Cylinder Inlet and Outlet Flange	1903076608	2
-	Packing Ring Set (First stage)	1903006995	1
7	*Packing Ring	1903145508	8
8	Aluminium Washer	1903074108	1
9	Sleeve	1903963804	1
10	Intermediate Ring	1901006279	5
11	Sleeve	-	4
12	Packing Flange	-	1
13	Hellilock Nut	1903206213	4